

MSP / SSP SERIES BENCH SCALE SETUP

NOTE: Your MSP or SSP Series Bench scale must be connected to a digital indicator before use. Your indicator must then be configured and calibrated before use.

1. Take scale in box to area where it will be used.
2. Unpack scale and place it on floor or sturdy bench.
3. **IMPORTANT!** Remove the four corner overload stops. You must remove the shroud in order to do this.
4. Use the feet to level the scale.
5. Take cable from underneath scale. The cable contains four wires from the scale's load cell.
6. Connect the four wires to your indicator. (Match signals, see diagram below).

Color	Wire Name
RED	+Excitation
BLK	- Excitation
GRN	+Signal
WHT	- Signal

7. Configure your indicator to match the capacity and displayed resolution of the bench scale. ***Do not exceed the rated capacity of the bench scale.***
8. Calibrate the bench scale to the indicator.

You are now ready to use the scale. If you encounter any problems during calibration or operation, call 1-800-503-9180.