

# **ATTENTION!**

- **Remove four corner overload stops before using scale!**
- **See MSP / SSP SERIES BENCH SCALE SETUP sheet for more information.**