

## TP-500SL SET-UP

1. Unpack scale from pallet, place on floor.
2. Remove indicator from packing material on top of scale.
3. Find necessary hardware (bolts, etc.) in box with indicator.
4. Place indicator on top of column. ***MAKE SURE THE CABLE IS NOT BEING PINCHED OR CAUGHT.***
5. Place bolts in hole provided, place washer and nuts on bolts, and then tighten.
6. Connect cable to indicator by connector or hardwire. ( Match signals, see manual)
7. Plug AC ADAPTER OR AC PLUG into power outlet. ***Make sure that the AC voltage appearing at the wall outlet matches the input voltage marked on the AC adapter.***
8. Turn indicator on. The indicator will count down then indicate zero weight. If it does not, then press the ZERO key.

You are now ready to use scale. If you see any error message or the scale does not function properly, call 1-800-503-9180.